


SAUTE VENT ERMAX ADAPTABLE SUR KAWASAKI Z800 / Z800 E 2013 → ∞ Durée du montage estimé : 15 min

Kit de fixation


- 4 vis BHc 5x30 grosse tête noire
- 2 entretoises plastique Ø6 L 10 mm
- 2 entretoises plastique Ø6 L 5 mm (en option pour les 2 points de fixation bas : modifie l'inclinaison du SV)
- 4 rondelles plastique Ø5
- 4 inserts caoutchouc Ø5

Montage

- Retirer le support d'origine de la tête de fourche.
- Retirer les 4 inserts caoutchouc de l'araignée. D'un seul côté (à droite ou à gauche), les remplacer par 2 inserts fournis.
- Présenter le support d'origine à l'intérieur du saute-vent Ermax.
- Sur le côté opposé des inserts posés sur la moto, solidariser le support et le saute-vent avec 2 vis 5x30, 2 rondelles, 1 entretoise au niveau du trou de fixation haut et les 2 inserts restants (voir photo ci-dessous).

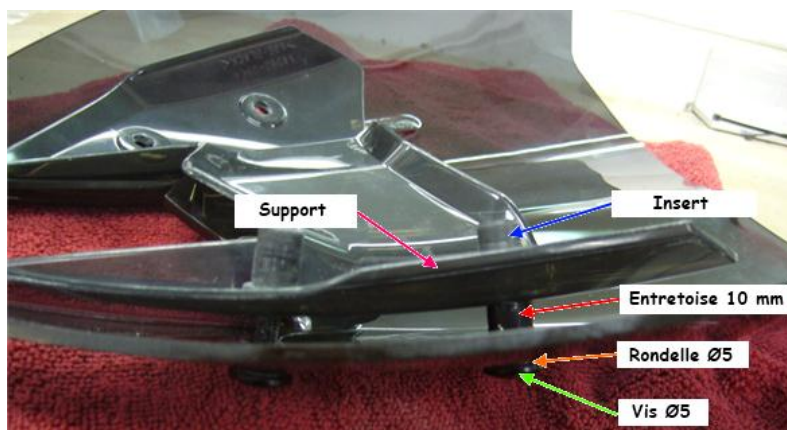

- Présenter le tout sur l'araignée de la moto (voir photo ci-dessous), puis finir le montage de l'autre coté en rajoutant les vis, rondelles plastiques et l'entretoise en haut.

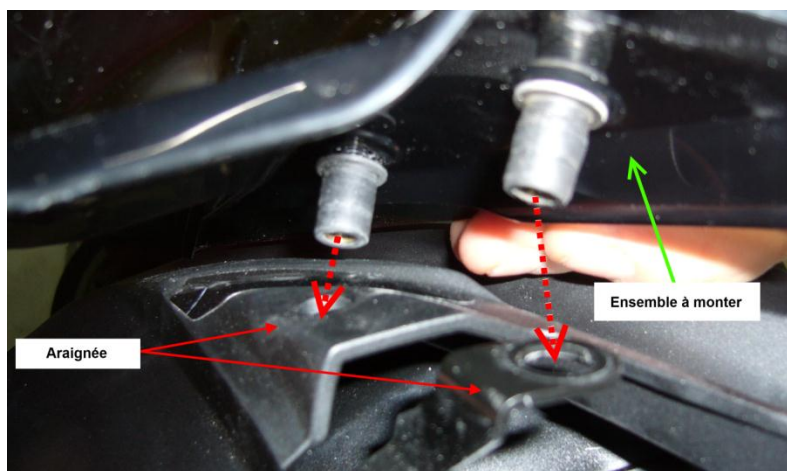

- Serrer l'ensemble des deux cotés en ajustant le positionnement du saute-vent grâce aux trous oblongs.

« ATTENTION »


- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

Fitting kit


- 4 screws BHc 5x30 big head black
- 2 plastic spacers Ø6 L 10 mm
- 2 plastic spacers Ø6 L 5 mm (in option for the 2 low fixing points : modify the slope of the nose screen)
- 4 plastic washers Ø5
- 4 rubber inserts Ø5

Fitting instructions

- Remove the original nose fairing support.
- Remove the 4 rubber inserts from the front fairing bracket. On one side (left or right), replace them by 2 provided inserts.
- Place the original support inside the Ermax nose screen.
- On the opposite side of the inserts fitted on the motorcycle, screw the nose screen on the support with 2 screws 5x30, 2 washers, 1 spacer at the upper fitting hole level, and the 2 remaining inserts (see photo below).

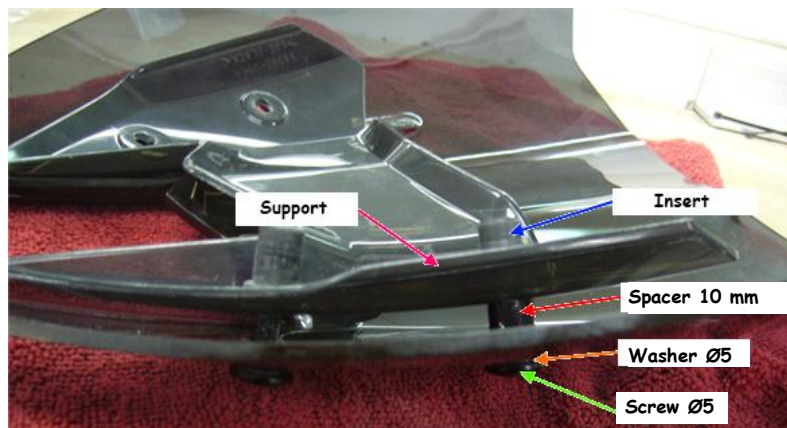

- Place the unit on the front fairing bracket (see picture below), and then finish the mounting on the other side by adding the screws, plastic washers and the spacer above.

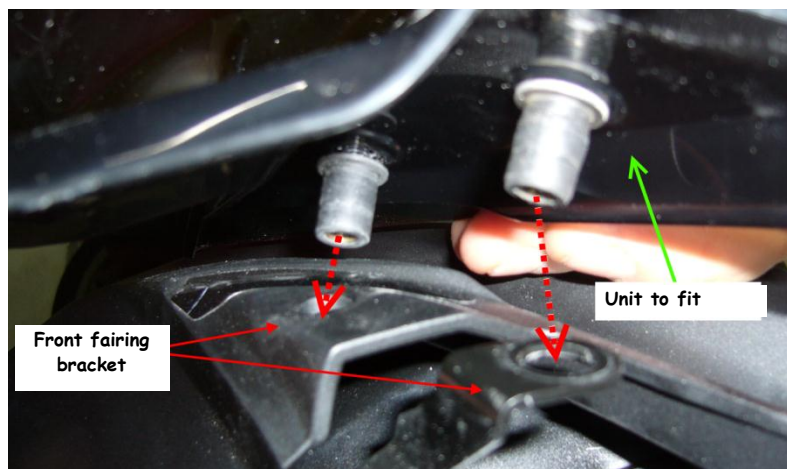

- Tighten both sides of the unit by adjusting the nose screen position thanks to slotted holes.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.